

Códigos de longa distância Internacionais

Austrália	61
África do Sul	27
Alemanha	49
Austria	43
Bélgica	32
Brasil	55
Canadá	1
China	86
Espanha	34
EUA	1
Finlândia	358
França	33
Grécia	30
Holanda	31
Hong Kong	852
Inglaterra	44
Itália	39
Japão	81
Noruega	47
Portugal	351
Rússia	7
Suécia	46
Suíça	41
Taiwan	886



TELEFONES PARA SUPORTE

Rio de Janeiro (24 X 7)
55 21 2422-9300

São Paulo (24 X 7)
55 11 3253-0077

Instruções

Nokia C2-01



Press Cell
SOLUÇÕES EM COMUNICAÇÃO MÓVEL

INSTRUÇÕES DO NOKIA C2-01

FUNÇÕES BÁSICAS

Ligar e desligar: Pressione a tecla Liga/Desliga.

Para efetuar uma chamada: Digite o N° e pressione a tecla Chamar/Enviar.

Para receber chamadas: Pressione a tecla Chamar/Enviar.

Para finalizar uma chamada: Pressione a tecla Liga/Desliga.

Para checar o contador: Na tela inicial pressione "Menu" e em seguida as teclas 3 7 4.

Para armazenar um N° : Digite o número do contato, pressione SALVAR, selecione o tipo de telefone, digite o sobrenome e o nome do contato, e pressione SALVAR.

Para bloquear e desbloquear o teclado: pressione MENU e *.

Para procurar rede manualmente: Na tela inicial pressione MENU> configurações> celular> Seleção de operadora> manual, e selecionar a operadora desejada.

Para troca de modo de rede 3G, 2G: Na tela inicial pressione MENU> configurações> celular> modo de rede> UMTS para 3G e GSM para 2G, em rede dupla mantém a seleção em automático.

NOKIA C2-01 INSTRUCTIONS

BASIC FUNCTIONS

Turn on and off: Press the End/Power key.

Make a call: Enter the phone number and press the call key.

To receive calls: When a calls come in press the call key to answer.

End the call: Press the End/Power key.


To check the counter: In idle mode press menu then press the 3 7 4.

To add a new contact: In idle mode enter a phone number, press save, select type phone, enter last name, first name of contact and press save.

To lock the keypad: Press menu and *.

To search for network manually: In idle mode press menu> settings> phone> Operator select> manual and select the preferred network.

To choose the network mode 3G, 2G: In idle mode press menu> settings> phone> network mode> UMTS to 3G and GSM to 2G in dual mode

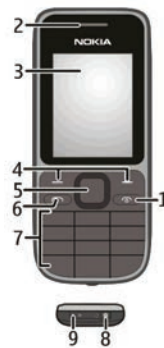

- | | | |
|-------------------------|---|-------------------|
| Tecla Liga/Desliga | 1 | End/Power key |
| Fone | 2 | Earpiece |
| Tela | 3 | Display |
| Teclas de seleção | 4 | Selection keys |
| Tecla de navegação | 5 | Scroll keys |
| Tecla Chamar/Enviar | 6 | Call keys |
| Teclado numérico | 7 | Keypad |
| Conector do carregador | 8 | Charger connector |
| Conector fone de ouvido | 9 | Headset connector |